


TAYLOR TIPS



Prevent Mix Level Heat Treat Failures

Did you know that over 30% of heat treat failures are a result of either too much mix or not enough mix in the hopper before the heat treat cycle begins? It is important to ensure the crew and managers know the proper mix levels prior to the heat treat cycle. Using the agitator as your guide, mix should be up to, but not over the cross bar of the agitator.

[Click here for Mix Level video demonstration](#)

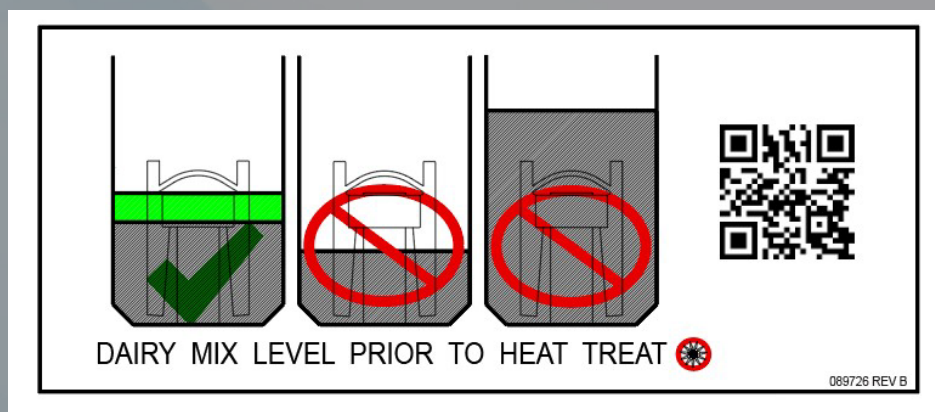

TAYLOR[®]
1-877-HELP-MCD

